



**100%**  
PURE BRASS PARTS

**ANTI  
SHOCK**

**LONG  
LIFE**

# PREMIUM SWITCHES

DV-1G



1 gang 1 way

DV-2G



2 gang 1 way

DV-3G



3 gang 1 way

DV-4G



4 gang 1 way

DV-6G



6 gang 1 way

DV-8G



8 gang 1 way

DV-10G



10 gang 1 way

DV-4G-MF




4 Gang Switch + Socket & Indicator  
(Dimmer Provision)

DV-4G-MF



4 Gang Switch + Socket, Indicator &  
Fan Dimmer

DV-6G-MF

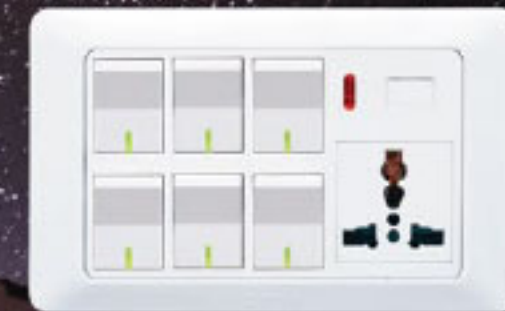

6 Gang Switch + Socket & Indicator  
(Dimmer Provision)

# PREMIUM SWITCHES

DV-6G-MF



6 Gang Switch + Socket, Indicator & Fan Dimmer

DV-1G-MF



1 gang + MF Socket

DV-1G-PS



1 gang + 5/16 Power Socket with Indicator

DV-1G-MPS



1 gang + (5/16 A + MF) Multi Power Socket with Indicator

DV-2G-PS-2



2 gang + Double (5/16) Power Socket with Indicator

DV-2G-MPS-2



2 gang + Double (16 A + MF) Multi Power Socket with Indicator

DV-1G-20A



20 Amp DP Switch

DV-1G-45A



45 Amp DP Switch

DV-1G-B



1 gang Bell push switch

DV-1G-WB



1 gang Water proof Bell push switch

DV-TV-1



TV Socket

DV-TV-2



Double TV Socket

# PREMIUM SWITCHES

DV-TEL-1



Telephone Socket

DV-TEL-2



Double Telephone Socket

DV-CS-1



Computer Socket

DV-TV/TEL



TV + Telephone Socket



1 gang with 2 pin Socket

DV-P-FD



Fan Dimmer Knob

DV-P-LD



Light Dimmer Knob

DV-P-TEL



Telephone Socket Knob

DV-P-TV



TV Socket Knob

DV-P-CS



Computer Socket Knob

DV-P-2P



2 pin Socket Knob

DV-P-SSK



Small Switch Knob

DV-P-MF



MF Socket Knob

DV-P-2W



2 Way Knob

DV-P-B




Bell push Switch Knob

DV-P-3X3



3x3 Blank Plate

DV-P-3X5

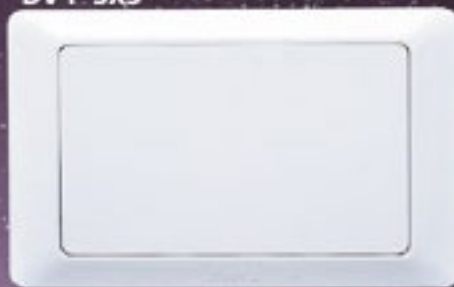

3x5 Blank Plate

DV-P-1G



1 Gang switch plate without Knob

DV-P-2G



2 Gang switch plate without Knob

DV-P-4G



4 Gang switch plate without Knob

# GANG SWITCH

DS811M1



1 Gang 1 Way

DS812M1



2 Gang 1 Way

DS813M1



3 Gang 1 Way

DS814M1



4 Gang 1 Way

DS926M1



6 Gang 1 Way

DS706M1



8 Gang 1 Way

DS638DV



4 Gang Switch + 13 Amp Socket

DS668DV



6 Gang Switch + 13 Amp Socket

DS660DV



4 Gang Switch + 13 Amp Socket + Dimmer

DS669DV



6 Gang Switch + 13 Amp Socket + Dimmer

# GANG SWITCH

DS959JB



13 Amp Switch + Socket

DS960JB



5/16 Amp Switch + Socket

DS933JB



13 Amp Double Switch + Socket

DS20AM5



20 Amp Heavy Switch

DS821F2



Door Bell

DS606JI



TV Socket

DS601JI



Telephone Socket

DS903JI



Computer Socket

DS908JI



Telephone + TV Socket

DS848S0



Fan Speed Adjusting Switch

DS209DK



2 Gang Switch + 2 pin Socket

DS813MS



3 Gang Switch + 2 pin Socket



**Corporate Office:**

Naxal Bhat-Bhateni, Kathmandu, Nepal

Phone No.: 01-4417593

Email: [info@divyaelectric.com](mailto:info@divyaelectric.com)

URL: [www.divyaelectric.com](http://www.divyaelectric.com)